



X2723C

CURVED GAMING MONITOR

USER MANUAL



Package Contents

The following items come with your packaging box.




Monitor



Monitor Base




Display Port Cable

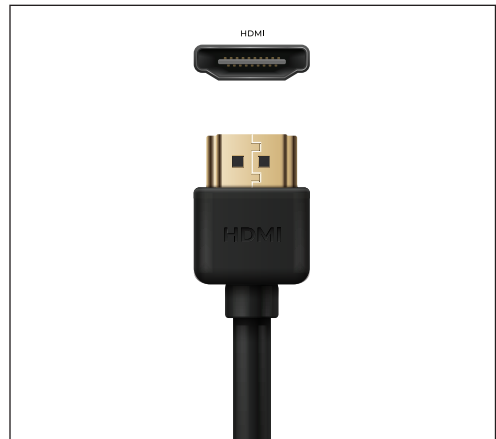

HDMI Cable



Power Cable

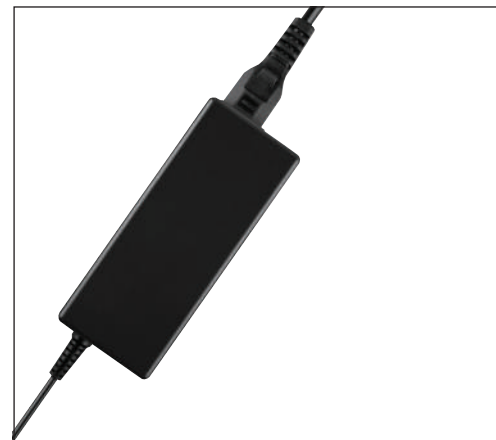

Power adapter


Note: Please Keep the packaging box and packing materials for future transportation of the monitor

Front view



Display Resolution	1920X1080
Refresh Rate	HDMI@144Hz DP@144Hz
Terminals	HDMI, DP, USB
Power Requirement	100~240VAC, 50/60Hz
Standby Power Consumption	<0.5W
Bend	1500R
Aspect Ratio	16:9
Carton Dimension	690X165X445mm
The power adapter	12V 4A

Back view

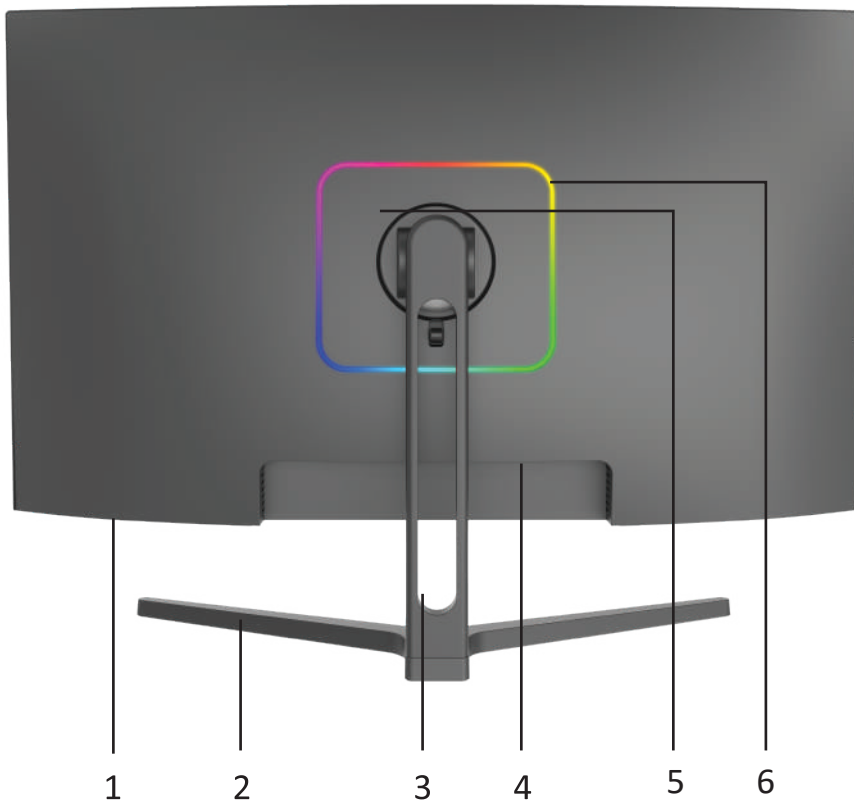

1. Controller
2. Base
3. Bracket
4. DP, DC & HDMI interface
5. Wall hanging support
6. RGB backlight

Controllers



1. Menu
2. Left
3. Right
4. Exit
5. Power

Safety Precautions

Read through the following Safety Precautions before using the monitor.

- Only use the accessories that are provided with the monitor or that which are recommended by the manufacturer.
- Keep the plastic packaging bag for the product in a place that cannot be reached by children.
- Before connecting the monitor to the power outlet, make sure that the voltage rating of the power cable is compatible with the power specification in the country where you are located.
- The power cord plug must be connected to a properly wired and grounded power outlet.
- Do not touch the plug with wet hands, otherwise easily cause electric shock.
- Place the monitor in a stable and well-ventilated place.
- Do not place the monitor near any heat sources such as electric radiators or direct sunlight.
- The holes or openings on the monitor are for ventilation. Do not cover or block the ventilation holes with any objects.
- Do not use the monitor near water, drinks, or all types of liquids. Failure to do so may result in electric shock or damage to the monitor.
- Make sure to unplug the monitor from the power outlet before cleaning.
- As the screen surface is easy to be scratched, avoid touching the surface with any hard or sharp object.
- Use a soft lint-free cloth instead of a tissue to wipe the screen. You may use a glass cleaner to clean the monitor if required. However, never spray the cleaner directly onto the screen.
- Disconnect the power cable if the monitor is not being used for a long period of time.
- Do not attempt to disassemble or repair the monitor yourself.

User Comfort Recommendations

The following are some tips for comfortable viewing of your monitor:

- Optimal viewing distances for monitors range from approximately 510 mm to 760 mm (20" to 30").
- A general guideline is to position the monitor such that the top of the screen is at or slightly below your eye-height when you are comfortably seated.
- Use adequate lighting for the type of work you are performing.
- Take regular and frequent breaks (at least for 10 minutes) every half hour.
- Be sure to periodically look away from your monitor screen and focus on a far object for at least 20 seconds during the breaks.
- Eye exercise can help reduce eye strain.
Repeat these exercises frequently:
 - (1) look up and down
 - (2) slowly roll your eye
 - (3) move your eyes diagonally.

Basic care

When the screen becomes dirty, do the following to clean the screen:

- Wipe the screen with your soft, lint-free cloth to remove any residual dust.
- Spray or apply the cleaning fluid onto a soft cloth. Then wipe the screen gently with the damp cloth.
- Spray or apply the cleaning fluid onto a soft cloth. Then wipe the screen gently with the damp cloth.

Note:

- Make sure that the cloth is damp, but not wet.
- When wiping, avoid applying excessive pressure on the screen.
- Acidic or abrasive cleaners can damage the screen.

Troubleshooting

Problem	Possible Solution(s)
No power	<ul style="list-style-type: none">• Make sure the power cable is properly connected to the power source and the monitor.• Check the cable and plug to make sure they are not broken.• Make sure the monitor is turned on.
No image appears on the screen	<ul style="list-style-type: none">• Make sure the monitor and the computer are properly connected and both devices are turned on.• Make sure you have selected the correct input source.• Adjust the Brightness and Contrast settings.
The image does not fill the entire screen	<ul style="list-style-type: none">• Try different Display Mode (aspect ratio) setting.
The colors are distorted	<ul style="list-style-type: none">• Make sure the input signal cable is properly connected.• Configure the image related settings.

Note : If the problem persists, please contact our customer service for further assistance.

Gaming PCS



Gaming Monitors



Gaming Headsets



Gaming Keyboard, Mouse & Mouse pad




Laptop Batteries



SSD



PC Accessories

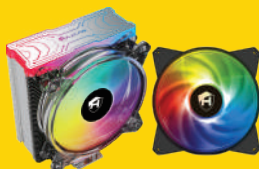

RGB cooling Fans



Power Supply



Wi-Fi Adapter



DP to HDMI Adapter

